


DDJ-ERGO

Hardware Diagram for rekordbox dj

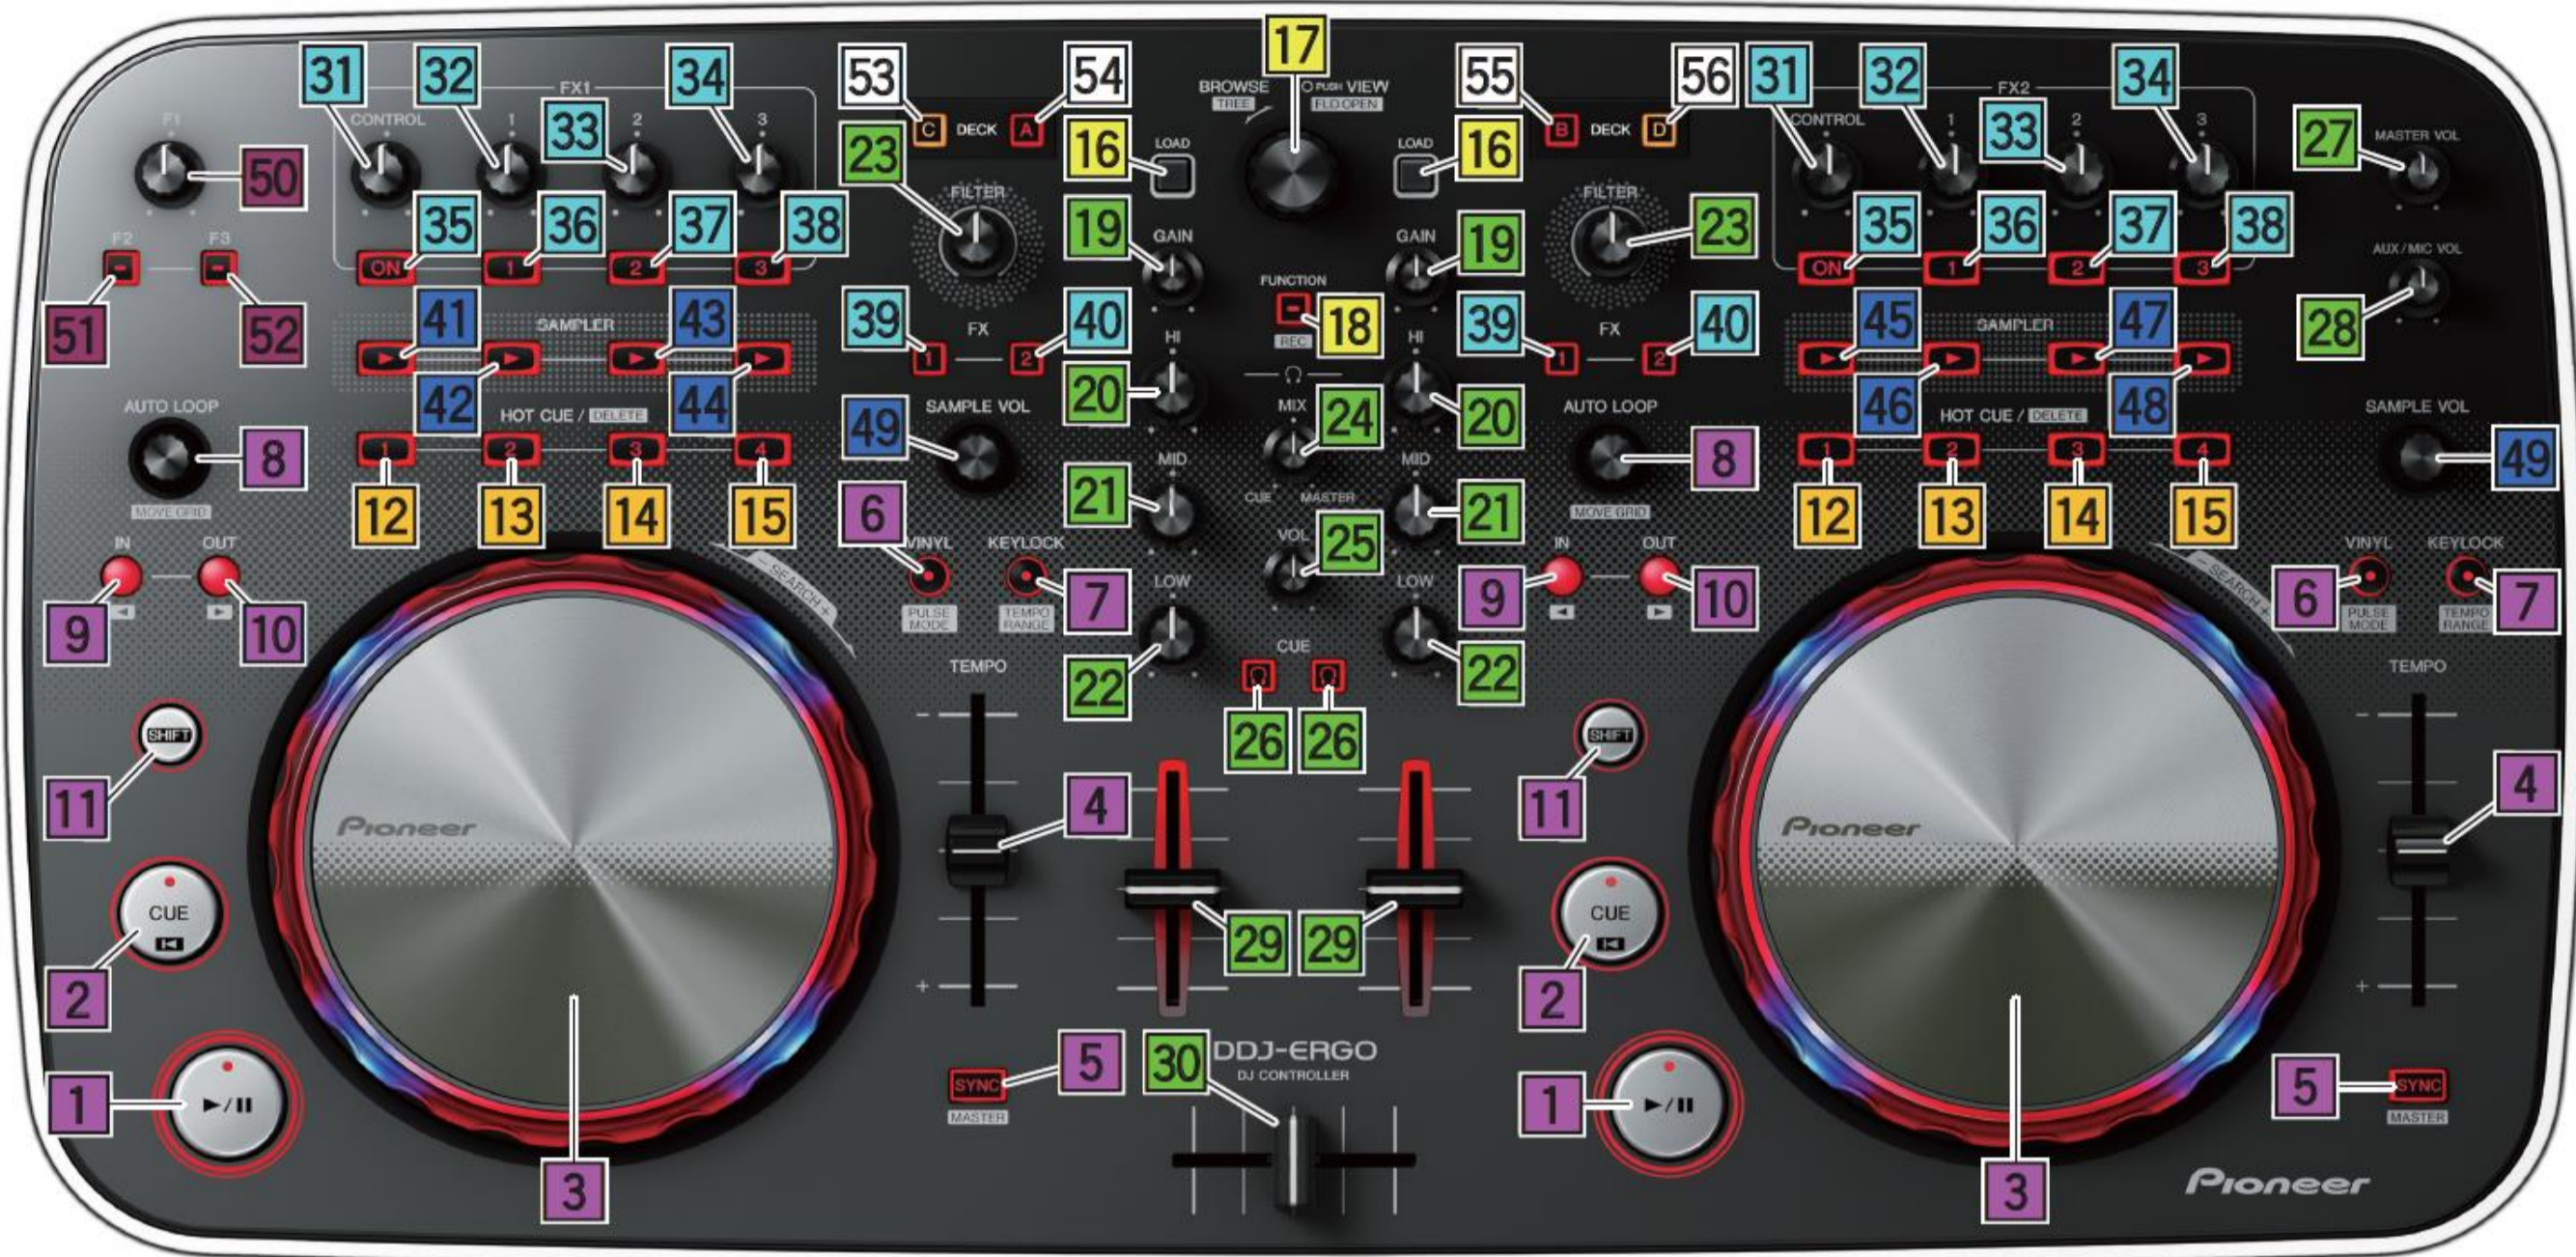

GROUP	NAME	FUNCTION	(+SHIFT)
No.			
DECK			
1	▶/	Play/Pause	-
2	CUE	Set Cue/Play, Back Cue	Jump to track start
3	JOG	top plate	Scratch(Vinyl On) , Pitch Bend(Vinyl Off)
		outer wheel	Pitch Bend
4	TEMPO	Tempo Control	-
5	SYNC	SYNC On/Off	Master
6	VINYL	Vinyl Mode On/Off	Pulse Mode Change
7	KEY LOCK	Master Tempo On/Off	Tempo Range
8	AUTOLOOP	rotate	Loop Size Select
		press	Auto Loop On
9	IN	Loop in/Loop in adjust	RE-TRIGGER
10	OUT	Loop out/Adjust loop out	Reloop / Exit
11	SHIFT	Shift	-
HOT CUE			
12	1	Hot Cue 1	Delete Hot Cue 1
13	2	Hot Cue 2	Delete Hot Cue 2
14	3	Hot Cue 3	Delete Hot Cue 3
15	4	Hot Cue 4	Delete Hot Cue 4
BROWSE			
16	LOAD		Load Track
			Sort by BPM(CH1) Sort by artist(CH2)
17	BROWSE	rotate	Browse(files/folders/items)
		press	Open folder/Scroll layer
18	FUNCTION	Close folder/Scroll layer	Show Tag List/Playlist Palette
MIXER			
19	GAIN	Gain	-
20	HI	EQ (Hi)	-
21	MID	EQ (Mid)	-
22	LOW	EQ (Low)	-
23	FILTER	Filter	-
24	MIX	Monitor Balance	-
25	VOL	Monitor Volume	-
26	CUE	Headphone CUE On/Off	-
27	MASTER VOL	Master Out Volume	-
28	AUX / MIC VOL	-	-
29	CH FADER	Channel fader	-
30	CROSSFADER	Crossfader	-

GROUP	NAME	FUNCTION	(+SHIFT)
No.			
EFFECT			
31	CONTROL	Select FX 1/2 beat	-
32	1	FX1 Level/Depth	-
33	2	FX2 Level/Depth	-
34	3	FX3 Level/Depth	-
35	ON	FX TAP (Adjust tempo manually)	Switch FX MODE (Single/Multi)
36	1	FX1 On/Off	Select FX 1
37	2	FX2 On/Off	Select FX 2
38	3	FX3 On/Off	Select FX 3
39	FX1	FX1 Assign On/Off	-
40	FX2	FX2 Assign On/Off	-
SAMPLER			
41	▶	Sampler 1 Play	Sampler 1 Stop / (Slot is Empty) Load from List
42	▶	Sampler 2 Play	Sampler 2 Stop / (Slot is Empty) Load from List
43	▶	Sampler 3 Play	Sampler 3 Stop / (Slot is Empty) Load from List
44	▶	Sampler 4 Play	Sampler 4 Stop / (Slot is Empty) Load from List
45	▶	Sampler 1 Play	Sampler 1 Stop / (Slot is Empty) Load from List
46	▶	Sampler 2 Play	Sampler 2 Stop / (Slot is Empty) Load from List
47	▶	Sampler 3 Play	Sampler 3 Stop / (Slot is Empty) Load from List
48	▶	Sampler 4 Play	Sampler 4 Stop / (Slot is Empty) Load from List
49	SAMPLE VOL	rotate	-
		press	-
DECK CHANGE			
53	DECK C	Deck C Select	-
54	DECK A	Deck A Select	-
55	DECK B	Deck B Select	-
56	DECK D	Deck D Select	-
OTHERS			
50	F1	-	-
51	F2	-	-
52	F3	-	-